

















 








Original	Sustituto
 Standby	 Power
 Auto / Eject	 Eject / Surround
 Mute	 Mute / Dimmer
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Info	 Info / Angle
 Nicam	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 Menu	 Menu / Home
 4	 4
 5	 5
 6	 6
 Exit / D.Setup	 Setup / OPT /
 Exit / D.Setup	 Exit / Cancel / Clear
 7	 7

Original	Sustituto
 8	 8
 9	 9
 Input	 AV / Input / RDS
 0	 0
 Recall	 Back / Return
 Sleep	 Sleep / Timer
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 CH-	 CH- / Page-
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Vol+	 Vol+
 Text / Slow	 Text / Goto
 Text / Slow	 Shift + Play / Slow





Original	Sustituto
Hold / Play/Pause	Play / Slow
Hold / Play/Pause	+ Shift + Stop /
Hold / Play/Pause	Pause / Step / Freeze
Page+ / Stop	Stop / Hold
Page+ / Stop	+ Shift + CH+ /
Page- / Zoom	Zoom / Size
Page- / Zoom	+ Shift + CH- /
[≡i] / I<<	I<< / Preset-
[≡□] / >>I	>>I / Preset+
[≡?] / <<<	<<< / Tune-
[≡●] / >>>	>>> / Tune+
EPG / D.Menu	D.Menu / Top
EPG / D.Menu	Guide / EPG / -/--
FAV / D.Title	+ Shift + Sound / Title
FAV / D.Title	Fav / Marker / PC
FAV- / D.Disp	Display / Media
FAV- / D.Disp	+ Shift + Down

Original	Sustituto
FAV+ / Goto	+ Shift + Up
FAV+ / Goto	+ Shift + Text /
Red / D.Prog	TV/Radio /
Red / D.Prog	Red / Netflix / Search
Green / Step	+ Shift + Pause / Step /
Green / Step	Green / APP / Repeat
Yellow / RPT	+ Shift + Green / APP /
Yellow / RPT	Yellow / YouTube / Repeat
Blue / A-B	+ Shift + Yellow / YouTube /
Blue / A-B	Blue / Prime Video / Random
List / Angle	+ Shift + Info / Angle
List / Angle	Smart / List
SUB-T	Subtitle / EQ
Aspect	+ Shift + Picture / Format
Rec	Rec / Rec Mode

