














































 



 
 

 













 



 









































 
| Original | Sustituto | Original | Sustituto |
|------------------|---|-----------------------|-----------|
| Power |  | Power | |
| Sleep |  | Sleep / Timer | |
| Mute |  | Mute / Dimmer | |
| Mode |  | AV / Input / RDS | |
| 1 |  | 1 | |
| 2 |  | 2 | |
| 3 |  | 3 | |
| Eject/Nicam2 |  | Eject / Surround | |
| Eject/Nicam2 |  | Sound / Title | |
| 4 |  | 4 | |
| 5 |  | 5 | |
| 6 |  | 6 | |
| TXT/MIX |  | Text / Goto | |
| Play/Pause |  | Play / Slow | |
| Play/Pause |  | Pause / Step / Freeze | |
| 7 |  | 7 | |
| 8 |  | 8 | |
| 9 |  | 9 | |
| Stop/Exit/Cancel |  | Exit / Cancel / Clear | |
| Stop/Exit/Cancel |  | Stop / Hold | |
| -/-- |  | Guide / EPG / -/-- | |
| 0 |  | 0 | |
| Back |  | Back / Return | |
| SYS Menu |  | Menu / Home | |
| Rec |  | Rec / Rec Mode | |
| Up |  | Up | |
| CH+ |  | CH+ / Page+ | |
| DTV/Radio |  | TV/Radio / | |
| Left |  | Left | |
| Enter |  | OK | |
| Right |  | Right | |
| Vol- |  | Vol- | |
| Down |  | Down | |
| CH- |  | CH- / Page- | |



| Original | Sustituto | |
|---------------|--|--|
| Vol+ |  Vol+ | |
| Return |  +  Shift + Back / Return | |
| Menu DVD |  D.Menu / Top | |
| Setup |  Setup / OPT / | |
| Display |  Display / Media | |
| Search/FAV |  +  Shift + Red / Netflix / | |
| Search/FAV |  Fav / Marker / PC | |
| Slow/EPG |  +  Shift + Play / | |
| Slow/EPG |  +  Shift + Guide / EPG / -- | |
| Language/Info |  Audio / Lang I/II | |
| Language/Info |  Info / Angle | |
| Zoom/List |  Zoom / Size | |
| Zoom/List |  Smart / List | |
| Red/Angle |  Red / Netflix / Search | |
| Red/Angle |  +  Shift + Info / Angle | |
| Green/Program |  Green / APP / Repeat | |
| Green/Program |  +  Shift + TV/Radio / Program | |



| Original | Sustituto | |
|---------------|--|--|
| Yellow/Repeat |  +  Shift + Green / APP / Repeat | |
| Yellow/Repeat |  Yellow / YouTube / Repeat | |
| Blue/A-B |  Blue / Prime Video / Random | |
| Blue/A-B |  +  Shift + Yellow / YouTube / | |
| <</Hold |  +  Shift + Stop / | |
| <</Hold |  << / Tune- | |
| >>/Index |  >> / Tune+ | |
| l<</Size |  l<< / Preset- | |
| l<</Size |  +  Shift + Zoom / | |
| >>/Reveal |  >> / Preset+ | |
| Subtitle |  Subtitle / EQ | |
| Title/Subpage |  +  Shift + Sound / Title | |
| FAV- |  +  Shift + Down | |
| FAV+ |  +  Shift + Up | |
| | | |
| | | |
| | | |

























 

 
 










| Original | Sustituto | Original | Sustituto |
|----------------|---|-------------|---|
| Standby |  Power | 8 |  8 |
| Auto / Eject |  Eject / Surround | 9 |  9 |
| Mute |  Mute / Dimmer | Input |  AV / Input / RDS |
| P.Mode |  Picture / Format | 0 |  0 |
| S.Mode |  Sound / Title | Recall |  Back / Return |
| Info |  Info / Angle | Sleep |  Sleep / Timer |
| Nicam |  Audio / Lang I/II | Up |  Up |
| 1 |  1 | Left |  Left |
| 2 |  2 | Enter |  OK |
| 3 |  3 | Right |  Right |
| Menu |  Menu / Home | Down |  Down |
| 4 |  4 | CH- |  CH- / Page- |
| 5 |  5 | CH+ |  CH+ / Page+ |
| 6 |  6 | Vol- |  Vol- |
| Exit / D.Setup |  Setup / OPT / | Vol+ |  Vol+ |
| Exit / D.Setup |  Exit / Cancel / Clear | Text / Slow |  Text / Goto |
| 7 |  7 | Text / Slow |  +  Shift + Play / Slow |
























| Original | Sustituto |
|-------------------|---|
| Hold / Play/Pause |  Play / Slow |
| Hold / Play/Pause |  +  Shift + Stop / |
| Hold / Play/Pause |  Pause / Step / Freeze |
| Page+ / Stop |  Stop / Hold |
| Page+ / Stop |  +  Shift + CH+ / |
| Page- / Zoom |  Zoom / Size |
| Page- / Zoom |  +  Shift + CH- / |
| [≡i] / I<< |  I<< / Preset- |
| [≡□] / >>I |  >>I / Preset+ |
| [≡?] / <<< |  <<< / Tune- |
| [≡●] / >>> |  >>> / Tune+ |
| EPG / D.Menu |  D.Menu / Top |
| EPG / D.Menu |  Guide / EPG / -/-- |
| FAV / D.Title |  +  Shift + Sound / Title |
| FAV / D.Title |  Fav / Marker / PC |
| FAV- / D.Disp |  Display / Media |
| FAV- / D.Disp |  +  Shift + Down |

| Original | Sustituto |
|--------------|--|
| FAV+ / Goto |  +  Shift + Up |
| FAV+ / Goto |  +  Shift + Text / |
| Red / D.Prog |  TV/Radio / |
| Red / D.Prog |  Red / Netflix / Search |
| Green / Step |  +  Shift + Pause / Step / |
| Green / Step |  Green / APP / Repeat |
| Yellow / RPT |  +  Shift + Green / APP / |
| Yellow / RPT |  Yellow / YouTube / Repeat |
| Blue / A-B |  +  Shift + Yellow / YouTube / |
| Blue / A-B |  Blue / Prime Video / Random |
| List / Angle |  +  Shift + Info / Angle |
| List / Angle |  Smart / List |
| SUB-T |  Subtitle / EQ |
| Aspect |  +  Shift + Picture / Format |
| Rec |  Rec / Rec Mode |













| Original | Sustituto | Original | Sustituto |
|----------|--|----------|---|
| Standby |  Power | Audio |  Audio / Lang I/II |
| Auto |  Smart / List | CH+ |  CH+ / Page+ |
| Mute |  Mute / Dimmer | Vol- |  Vol- |
| 1 |  1 | Display |  Display / Media |
| 2 |  2 | CH- |  CH- / Page- |
| 3 |  3 | Up |  Up |
| 4 |  4 | Left |  Left |
| 5 |  5 | OK |  OK |
| 6 |  6 | Right |  Right |
| 7 |  7 | Menu |  Menu / Home |
| 8 |  8 | Down |  Down |
| 9 |  9 | Exit |  Exit / Cancel / Clear |
| -/-- |  +  Shift + Guide / EPG / -/-- | Input |  AV / Input / RDS |
| 0 |  0 | P.Mode |  Picture / Format |
| Recall |  Back / Return | S.Mode |  Sound / Title |
| Vol+ |  Vol+ | Sleep |  Sleep / Timer |
| Aspect |  +  Shift + Picture / Format | FAV |  Fav / Marker / PC |



| Original | Sustituto | Original | Sustituto |
|----------|---|----------|---|
| FAV- |  +  Shift + CH- / | Stop |  Stop / Hold |
| FAV+ |  +  Shift + CH+ / | I<< |  I<< / Preset- |
| EPG |  Guide / EPG / -/-- | >>I |  >>I / Preset+ |
| Text |  Text / Goto | Red |  Red / Netflix / Search |
| Hold |  +  Shift + Stop / | Green |  Green / APP / Repeat |
| Tv/Radio |  TV/Radio / | Yellow |  Yellow / YouTube / Repeat |
| Subtitle |  Subtitle / EQ | Blue |  Blue / Prime Video / Random |
| Index |  Info / Angle | | |
| Size |  Zoom / Size | | |
| Reveal |  Setup / OPT / | | |
| Subpage |  Eject / Surround | | |
| Media |  +  Shift + Display / Media | | |
| Play |  Play / Slow | | |
| Pause |  Pause / Step / Freeze | | |
| << |  << / Tune- | | |
| >> |  >> / Tune+ | | |
| Rec |  Rec / Rec Mode | | |



| Original | Sustituto | Original | Sustituto |
|-------------|---|---------------|---|
| On/Off |  Power | Chan.Down |  CH- / Page- |
| Mute |  Mute / Dimmer | 1 |  1 |
| Txt Stop |  Stop / Hold | 2 |  2 |
| Info |  Rec / Rec Mode | 3 |  3 |
| Sleep Timer |  Picture / Format | 4 |  4 |
| Text |  Setup / OPT / | 5 |  5 |
| TV/AV |  AV / Input / RDS | 6 |  6 |
| Menu |  Menu / Home | 7 |  7 |
| Menu Up |  Up | 8 |  8 |
| Menu Left |  Left | 9 |  9 |
| OK Enter |  OK | Guide -/-- 1. |  Guide / EPG / -/-- |
| Menu Right |  Right | 0/10 |  0 |
| Menu Off |  Exit / Cancel / Clear | 2.Fav P/C 2. |  Fav / Marker / PC |
| Menu Down |  Down | | |
| Volume+ |  Vol+ | | |
| Chan.Up |  CH+ / Page+ | | |
| Volume- |  Vol- | | |

