 

 














 

 


 


 


 




Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0
 Recall	 Back / Return
 Game	 Display / Media
 Auto	 Smart / List
 Info	 Info / Angle

Original	Sustituto
 Menu	 Menu / Home
 EPG	 Guide / EPG / -/-
 Exit	 Exit / Cancel / Clear
 Left	 Left
 Vol-	 Vol-
 Up	 Up
 CH+	 CH+ / Page+
 Right	 Right
 Vol+	 Vol+
 OK	 OK
 CH-	 CH- / Page-
 Down	 Down
 Red	 Red / Netflix / Search
 Zoom	 Zoom / Size
 Green	 Green / APP / Repeat
 Lan/Audio	 Audio / Lang I/II
 Yellow	 Yellow / YouTube / Repeat





Original		Sustituto	
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	Tv/Radio		TV/Radio /
	Blue		Blue / Prime Video / Random
	Text		Text / Goto
	>>		>> / Tune+
	Subtitle		Subtitle / EQ

Original		Sustituto	

