
 








 
























 
 



































Original	Sustituto	Original	Sustituto
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	<<		<< / Preset-
	>>		>>  / Preset+
	EQ		Subtitle / EQ
	Zoom		Zoom / Size
	TV-Mode		TV/Radio /
	Setup		Setup / OPT /
	L/R		Text / Goto
	Input		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Reset		Exit / Cancel / Clear
	Down		Down
	Return		Back / Return
	Vol+		Vol+
	Treb+		CH+ / Page+
	Vol-		Vol-
	OSD		Display / Media
	Treb-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Original	Sustituto
7	AUX - HDD 7
8	USB 8
9	BLUETOOTH 9
10+	GUIDE EPG Guide / EPG / -/--
0/10	HDMI - BAT 0
P/N	PC FAV MARKER Fav / Marker / PC
REPEAT	APP REPEAT Green / APP / Repeat
SUB	YouTube REPEAT A-B Yellow / YouTube / Repeat
+	Prime Video RANDOM Blue / Prime Video / Random
SLOW	SHIFT + SLOW Play /
A1	SHIFT + TV 1
A2	SHIFT + DVD 2
B1	SHIFT + CD - STB 3
B2	SHIFT + VIDEO 4
C1	SHIFT + TAPE 5
C2	SHIFT + TUNER 6
D1	SHIFT + AUX - HDD 7

Original	Sustituto
D2	SHIFT + USB 8 Shift + 8
E1	SHIFT + BLUETOOTH 9 Shift + 9
E2	SHIFT + GUIDE EPG Shift + Guide / EPG / -/--
E3	SHIFT + HDMI - BAT 0 Shift + 0
E4	SHIFT + PC FAV MARKER Shift + Fav / Marker / PC

