







 





























Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 EQ	 Subtitle / EQ
 1	 1
 2	 2
 3	 3
 VFD	 Blue / Prime Video / Random
 4	 4
 5	 5
 6	 6
 L/R	 Red / Netflix / Search
 7	 7
 8	 8
 9	 9
 P/N	 Yellow / YouTube / Repeat
 Repeat	 Green / APP / Repeat
 0/10	 0

Original	Sustituto
 10+	 Guide / EPG / -/-
 Zoom	 Zoom / Size
 TV Mode	 Shift + 1
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 <<	 << / Tune-
 >>	 >> / Tune+
 USB/Card	 Shift + 8
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Enter	 OK
 Right	 Right
 Clock	 Sleep / Timer





Original	Sustituto
Down	Down
Setup	Setup / OPT /
Echo-	CH- / Page-
Echo+	CH+ / Page+
Mic Vol-	Shift + Vol-
Mic Vol+	Shift + Vol+
Mic On/Off	Smart / List
Treb+	Shift + Up
Bass+	Shift + CH+ /
Vol+	Vol+
Input	AV / Input / RDS
Treb-	Shift + Down
Bass-	Shift + CH- /
Vol-	Vol-

Original	Sustituto

