





















 


















Original	Sustituto	Original	Sustituto
	Power		Green / APP / Repeat
	Mute		Yellow / YouTube / Repeat
	1		Blue / Prime Video / Random
	2		Vol+
	3		Vol-
	4		CH+ / Page+
	5		CH- / Page-
	6		Up
	7		Left
	8		OK
	9		Right
	0		Down
	DEL		Back / Return
	TXT		Rec / Rec Mode
	Menu		Picture / Format
	Guide		Play / Pause
	Red		<< / Tune-





Original	Sustituto	Original	Sustituto
	Stop		Stop / Hold
	Play / Pause		Pause / Step / Freeze
	>>		>> / Tune+

