





 


 






 


 


 
 

 


 

 

 




 


Original	Sustituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Menu	 Menu
 Exit	 Exit
 Ch+	 Ch +
 Ch+	 Up
 Ch-	 Ch -

Original	Sustituto
 Ch-	 Down
 Vol+	 Vol +
 Vol+	 Right
 Vol-	 Vol -
 Vol-	 Left
 OK	 Ok
 Red/EPG	 Red
 Red/EPG	 Guide
 Yellow/Subtitle	 Yellow
 Yellow/Subtitle	 Subt
 Blue/TTX	 Text
 Blue/TTX	 Blue
 Green/Audio	 Green
 Green/Audio	 Dual
 i	 Info
 FAV	 Pre Ch
 TV/Radio	 TV/R





Original	Sustituto	Original	Sustituto
 Video	 Format		
 Prog	 Sleep		
 File	 Media		
 Device	 Smart		
 REC	 Rec		
 Zoom	 Eject		
 Stop	 Stop		
 Prev	 I<<		
 Next	 >>I		
 Play/Pause	 Play		
 Play/Pause	 Pause		
 <<	 <<		
 >>	 >>		

