





































Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Shift + Smart / List
 Recall	 Back / Return
 FAV	 Fav / Marker / PC
 Subtitle	 Subtitle / EQ
 Info	 Info / Angle
 TTX	 Text / Goto

Original	Sustituto
 Vol+	 Vol+
 Vol-	 Vol-
 Page+	 Shift + CH+ /
 Page-	 Shift + CH- /
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Lang	 Audio / Lang I/II
 Timeshift	 Smart / List
 Tv/Radio	 TV/Radio /
 EPG	 Guide / EPG / -/-
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 OK	 OK
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear





Original	Sustituto
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Play	Play / Slow
Pause	Pause / Step / Freeze
>>I	>>I / Preset+
Rec	Rec / Rec Mode
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
Stop	Stop / Hold
Timer	Sleep / Timer
PVR	AV / Input / RDS
V-Format	Shift + 4
Aspect	Picture / Format

Original	Sustituto

