 




Original		Sustituto		Original		Sustituto	
	Power		Power		SD Card		D. Menu
	Guide		Guide		[+]/Aspect		3D
	Exit		Exit		Cast Vieta		List
	i		Info		1		1
	Option		Options		2		2
	Back/Return		Back		3		3
	OK		Ok		4		4
	Up		Up		5		5
	Down		Down		6		6
	Right		Right		7		7
	Left		Left		8		8
	Viera Tools		Smart		9		9
	Viera Link		Media		0		0
	Menu		Menu		Mute		Mute
	Direct Tv Rec		TV/R		Last View		Pre Ch
	Input Tv		AV		Vol+		Vol +
	Input AV		Shift + AV		Vol-		Vol -





Original	Sustituto
CH+	Ch +
CH-	Ch -
	Red
	Green
	Yellow
	Blue
[=]/Text	Text
[=♦]/STTL	Subt
[=i]/Index	Dual
[=+]/Hold	Format
	Rec
	<<
	Play
	>>
	Stop
	Pause
	Shift + Power

Original	Sustituto
	Shift + Ch -
	Shift + Ch +



