 
 


	Original	Sustituto	
POWER	POWER	 Power	
RESET	RESET	 Volt / Focus	
COMP.	COMP.	 Comp / Video	
VIDEO	VIDEO	 Shift + Comp / Video	
S-VIDEO	S-VIDEO	 Mode	
FREEZE	FREEZE	 Freeze / Timer	
MAGNIFY	MAGNIFY	 + / Play	
UP / K-STONE+	UP / K-STONE+	 Up	
LEFT / SOURCE	LEFT / SOURCE	 Left	
LEFT / SOURCE	LEFT / SOURCE	 Source	
ENTER	ENTER	 Enter	
RIGHT / AUTO	RIGHT / AUTO	 Right	
RIGHT / AUTO	RIGHT / AUTO	 Auto	
DOWN /	DOWN /	 Down	
MENU	MENU	 Menu	
SOURCE LOCK	SOURCE LOCK	 Shift + Source	
AV-MUTE	AV-MUTE	 Blank / Mute	

	Original	Sustituto	
VOL-	VOL-	 Vol - / Page -	
VOL+	VOL+	 Vol + / Page +	

