



 

 











 

 
 

 



 
 







 
Original	Sustituto
	 Power
	 Info
	 Options
	 Sleep
	 Format
	 AV
	 3D
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Back

Original	Sustituto
	 0
	 Menu
	 Red
	 Green
	 Yellow
	 Blue
	 Up
	 Down
	 Right
	 Left
	 Ok
	 Ch +
	 Ch -
	 Vol +
	 Vol -
	 Pre Ch
	 Dual





Original	Sustituto
	 Subt
	 Mute
	 Smart
	 Guide
	 D. Menu
	 Text
	 Media
	 Shift + Info
	 Eject
	 TV/R
	 Rec
	 Stop
	 Play
	 Pause
	 <<
	 >>
	 I<<

Original	Sustituto
	 >>I

