 

 

 



 

 

 

 
 
 

 
 
 
 
 
 
 
 
 

 
 
 


 
 

 



 
 


 

 






 






 

 

 

 
 

 




Original	Sustituto	Original	Sustituto
 Power	 Power	 List/+10	 Guide
 Mute	 Mute	 Recall/Program	 Back
 Source	 AV	 Tv Menu	 Menu
 P.Mode	 Shift + Format	 Exit	 Exit
 S.Mode	 Shift + Dual	 Goto/Text	 Text
 I/II/Audio	 Dual	 Info/Display	 Info
 Sleep	 Sleep	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 OK/Enter	 Ok
 5	 5	 P+	 Ch +
 6	 6	 P-	 Ch -
 7	 7	 Vol+	 Vol +
 8	 8	 Vol-	 Vol -
 9	 9	 Red/DVD Setup	 Red
 0/10	 0	 Green/A-B	 Green





Original		Sustituto		Original	Sustituto
	Yellow/Angle		Yellow		
	Blue/Repeat		Blue		
	Subtitle		Subt		
	Play/Hold		Play		
	Pause		Pause		
	Size		Format		
	D.Dis/Reveal		3D		
	D.Menu/Mix		D. Menu		
	Zoom/Index		Shift + Eject		
	I<</FAV		I<<		
	>>I/Subpage		>>I		
	Stop		Stop		
	Tv/Radio		TV/R		
	<<		<<		
	>>		>>		
	Eject/EPG		Eject		

