 













































 



 





















Original		Sustituto		Original		Sustituto	
	Power		Power		List		Smart / List
	Mute		Mute / Dimmer		Recall		Back / Return
	Source		AV / Input / RDS		Tv Menu		Menu / Home
	P.Mode		Picture / Format		Exit		Exit / Cancel / Clear
	S.Mode		Sound / Title		Text		Text / Goto
	I/II/Audio		Audio / Lang I/II		Info/Display		Display / Media
	Sleep		Sleep / Timer		Info/Display		Info / Angle
	1		1		Up		Up
	2		2		Left		Left
	3		3		OK/Enter		OK
	4		4		Right		Right
	5		5		Down		Down
	6		6		Vol-		Vol-
	7		7		Vol+		Vol+
	8		8		P-		CH- / Page-
	9		9		P+		CH+ / Page+
	0		0		Red		Red / Netflix / Search



