

 


 



 

 

 


 

 
 

 
 
 
 

 
 
 



 

 





 
 


 
 
 

 
 


 
 


 

 
 

 
 
 
 





 



 


 









 

 








Original	Sustituto	Original	Sustituto
 Power	 Power	 Up	 Up
 [≡i]/Info	 Info	 Down	 Down
 Mute	 Mute	 Right	 Right
 1	 1	 Left	 Left
 2	 2	 Enter	 Ok
 3	 3	 Index	 Media
 4	 4	 List	 List
 5	 5	 CH+	 Ch +
 6	 6	 CH-	 Ch -
 7	 7	 Vol+	 Vol +
 8	 8	 Vol-	 Vol -
 9	 9	 ♥	 Pre Ch
 0	 0	 Sleep	 Sleep
 [≡?]/Source	 AV	 EPG	 Guide
 (O/I/II/Audio	 Dual	 Recall	 Back
 Menu	 Menu	 Red	 Red
 Exit	 Exit	 <<	 <<

Original	Sustituto	Original	Sustituto
 Up	 Up	 TV	 AUX
 Down	 Down	 DVD	 SAT
 Right	 Right	 PLAY MODE	 REC MODE
 Left	 Left	 FF	 ■
 Enter	 Ok		 RR
 Index	 Media	 DISC NAV	 SOUND
 List	 List	 AD	 SETTINGS
 CH+	 Ch +	 LIST	 DUAL
 CH-	 Ch -	 SUBT	 OPT
 Vol+	 Vol +	 PROG	 SEARCH
 Vol-	 Vol -	 PICTURE	 ECO
 ♥	 Pre Ch	 SLEEP	 TV/R
 Sleep	 Sleep	 FORMAT	 3D
 EPG	 Guide	 E-MANUAL	 REPEAT
 Recall	 Back	 ZOOM	 TIMER
 Red	 Red	 D.MENU	 TEXT
 <<	 <<	 ▲	 AV





Original	Sustituto	Original	Sustituto
	>>		>>
	Green		Green
	Yellow		Yellow
	<<		<<
	>>		>>
	Blue		Blue
	[≡]		Text
	Play		Play
	Pause		Pause
	Stop/Still		Stop
	[≡+]		Format
	Radio		TV/R
	[≡◆]/[+]		3D
	[≡x]		Options
	[≡O]/Subtitle		Subt
	DMP		Smart
	Rec		Rec

