


 



 
 




 
 
 
 


 

 





 













 



 


 



 

 
 
 



 



 

 






 








Original	Sustituto	Original	Sustituto
 Power	 Power	 Back	 Back
 [=i]/Info	 Info	 Exit	 Exit
 Mute	 Mute	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 Enter	 Ok
 5	 5	 Vol+	 Vol +
 6	 6	 Vol-	 Vol -
 7	 7	 CH+	 Ch +
 8	 8	 CH-	 Ch -
 9	 9	 List	 List
 0	 0	 Sleep	 Sleep
 [=?]/Source	 AV	 EPG	 Guide
 OOI/II/Audio	 Dual	 ♥/FAV	 Pre Ch
 Menu	 Menu	 Red	 Red
 [≡♦]/[++]	 3D	 Green	 Green





Original	Sustituto	Original	Sustituto
	Yellow		Yellow
	Blue		Blue
	<<		<<
	>>		>>
	<<		<<
	>>		>>
	Play		Play
	Pause		Pause
	Stop		Stop
	[≡]		Text
	Time Shift		Media
	[≡o]		Format
	Radio		TV/R
	[≡x]		Subt
	DMP		Options
	Index		Smart
	Rec		Rec

