



 

 


 
 
 



 
 

 




 



 

 






Original	Sustituto	Original	Sustituto
PWR On/Off	 Power	4ghi	 4
Mute	 Mute	5jkl	 5
Subt.List	 Subt	6mno	 6
Sleep Timer	 Sleep	7pqrm	 7
Video	 D. Menu	8tuv	 8
Text	 Text	9wxyz	 9
TV/SAT	 AV	Guide Pilote	 Guide
Menu Up	 Up	0/10	 0
Display	 Info	FAV Pref.	 Pre Ch
Menu Left	 Left	Red	 Red
OK Enter	 Ok	Green	 Green
Menu Right	 Right	Yellow	 Yellow
Menu Down	 Down	Blue	 Blue
Audio	 Dual	Tune-	 Ch -
1. ?	 1	Aft/Caf	 Media
2abc	 2	Store	 Smart
3def	 3	Tune+	 Ch +



Original	Sustituto	Original	Sustituto
LNB F.Forward	 >>		
Radio	 TV/R		

