


 

 
 

 

 

 


 

 

 

 

 

 

 

 

 






Original	Sustituto
 Power	 Power
 EQ	 Dual
 Mute	 Mute
 Album Up	 Vol +
 Album Down	 Vol -
 Playlist Up	 Ch +
 Playlist Down	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Sustituto
 Star	 Pre Ch
 Guía	 Guide
 Buscar	 Smart
 Media	 Media
 Grab	 Options
 Info	 Info
 Menu	 Menu
 Salir	 Exit
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Bass	 Format
 Treb	 3D
 Red / Rec	 Red
 Green	 Green





Original	Sustituto	Original	Sustituto
Yellow	Yellow		
Blue	Blue		
Red / Rec	Rec		
<<<	<<<		
>>>	>>>		
Play / Pause	Play		
Play / Pause	Pause		
Stop	Stop		
>	>>		
<	<<		
>	+ Shift + Pause		
Ir A	Back		
Widgets TV	Text		
Top TV	AV		

