




 







 




 
 






 



 
 

 








 

 
 



 



 

 



 



 








Original	Sustituto	Original	Sustituto
 Standby / On	 Power	 Play reverse / Pause	 Pause
 Sleep	 Sleep	 >>	 >>
 Dimmer	 Blue	 Stop	 Stop
 Display	 Info	 <<	 <<
 Input Sel. CD	 1	 Play	 Play
 Input Sel. Tape	 2	 Muting	 Mute
 Input Sel. Phono	 3	 Up	 Up
 Input Sel. Tuner	 4	 Right	 Right
 Input Sel. DVD	 5	 Down	 Down
 Input Sel. Video 1	 6	 Left	 Left
 Input Sel. Video 2	 7	 Enter	 Ok
 SUR Mode	 Subt	 Volume +	 Vol +
 Audio Sel	 Dual	 Volume -	 Vol -
 Tuner + / Preset	 Ch +	 Return	 Back
 Tuner - / Preset -	 Ch -	 Setup	 Options
 I<<	 I<<	 Test Tone	 Smart
 >>I	 >>I	 CH Sel	 Media





 
	Original	Sustituto		Original	Sustituto
Level -		SHIFT + 	Shift + Down		
Level +		SHIFT + 	Shift + Up		





Original	Sustituto	Original	Sustituto
 Power DVD	 Power	 Enter	 Ok
 I<<	 I<<	 Volume +	 Vol +
 >>I	 >>I	 Volume -	 Vol -
 Play Reverse / Pause	 Pause	 Return	 Back
 <<	 <<	 Setup	 Options
 Play	 Play		
 >>	 >>		
 Stop	 Stop		
 Disc	 Smart		
 Muting	 Mute		
 Top Menu	 Shift + Menu		
 Top Menu	 D. Menu		
 Menu	 Menu		
 Up	 Up		
 Right	 Right		
 Down	 Down		
 Left	 Left		



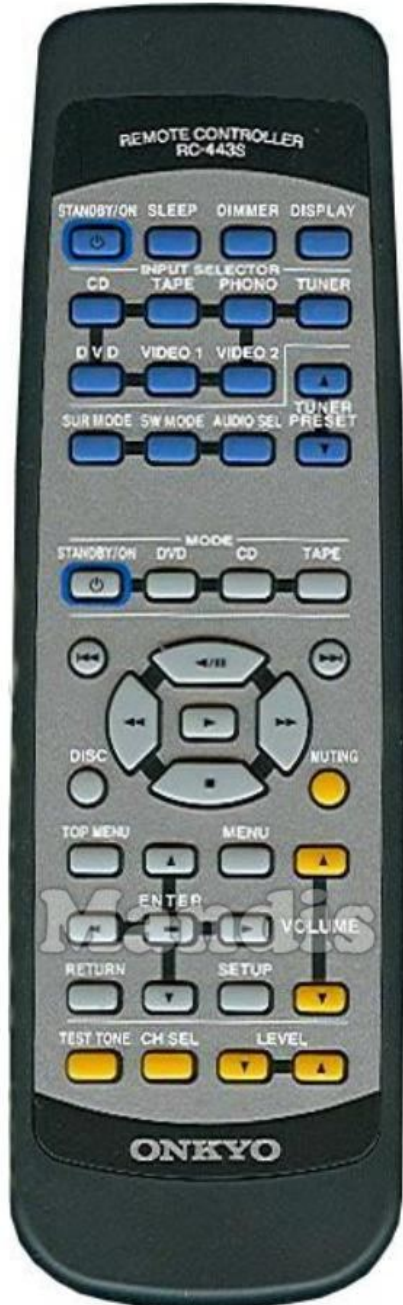

Original		Sustituto		Original	Sustituto
	Play reverse / Pause		Pause		
	<<		<<		
	Play		Play		
	>>		>>		
	Stop		Stop		
	Muting		Mute		
	Volume +		Vol +		
	Volume -		Vol -		
	Left		Left		
	Enter		Ok		
	Right		Right		

