



Original	Sustituto	Original	Sustituto
On	Power	Muting	Mute / Dimmer
Standby	Shift + Power	Level Down	CH- / Page-
Sleep	Sleep / Timer	Level Up	CH+ / Page+
Return	Back / Return	I<<	I<< / Preset-
Setup	Setup / OPT /	Play	Play / Slow
Disc+	Shift + CH+ /	>>I	>>I / Preset+
Up	Up	<<	<< / Tune-
Vol+	Vol+	Stop	Stop / Hold
Disc-	Shift + CH- /	>>	>> / Tune+
Left	Left	Rec / Random	Rec / Rec Mode
Enter	OK	Pause / Play Rev.	Pause / Step / Freeze
Right	Right	Open / Close	Shift + Eject / Surround
Vol-	Vol-	Input Sel. DVD	2
Down	Down	Input Sel. CD	3
Audio	Audio / Lang I/II	Input Sel. V1	1
CH Sel	Smart / List	Input Sel. V2	4
Test	Text / Goto	Input Sel. T1	5
















 

Original	Sustituto
ON	Power
STDBY	Shift + Power
Return	Back / Return
Setup	Setup / OPT /
Disc+	CH+ / Page+
Up	Up
Vol+	Vol+
Disc-	CH- / Page-
Left	Left
Enter	OK
Right	Right
Vol-	Vol-
Down	Down
Top Menu	D.Menu / Top
Menu	Menu / Home
Muting	Mute / Dimmer
Angle	Info / Angle

Original	Sustituto
Subtitle	Subtitle / EQ
I<<	I<< / Preset-
Play	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
>>	>> / Tune+
Random	Blue / Prime Video / Random
Pause	Pause / Step / Freeze
Open / Close	Eject / Surround
1	1
2	2
3	3
4	4
5	5
6	6
7	7





Original	Sustituto
 ON	 Power
 STDBY	 Shift + Power
 Disc+	 CH+ / Page+
 Vol+	 Vol+
 Vol-	 Vol-
 Muting	 Mute / Dimmer
 I<<	 I<< / Preset-
 Play	 Play / Slow
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Random	 Blue / Prime Video / Random
 Pause	 Pause / Step / Freeze
 Open / Close	 Eject / Surround
 1	 1
 2	 2

Original	Sustituto
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +10	 Guide / EPG / -/-
 0	 0





Original	Sustituto	Original	Sustituto
	ON		Power
	STDBY		Shift + Power
	Vol+		Vol+
	Enter		OK
	Enter		Fav / Marker / PC
	Vol-		Vol-
	Muting		Mute / Dimmer
	I<<		I<< / Preset-
	Play		Play / Slow
	>>I		>>I / Preset+
	<<		<< / Tune-
	Stop		Stop / Hold
	>>		>> / Tune+
	Rec / Random		Rec / Rec Mode
	Rec / Random		Blue / Prime Video / Random
	Pause		Pause / Step / Freeze
	Open / Close		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10		Guide / EPG / -/-
	0		0

