









Original	Sustituto
 Power	 Power
 i	 ANGLE INFO
 Input Select	 RDS AV INPUT
 Picture Size	 SIZE ZOOM
 1	 TV 1
 2	 DVD 2
 3	 CD - STB 3
 Ch + / Page +	 + CH PAGE
 4	 VIDEO 4
 5	 TAPE 5
 6	 TUNER 6
 Ch - / Page -	 - CH PAGE
 7	 AUX - HDD 7
 8	 USB 8
 9	 BLUETOOTH 9
 Vol +	 + VOL
 Sleep	 TIMER SLEEP

Original	Sustituto
 0	 HDMI - BAT 0
 MUTE	 DIMMER MUTE
 Vol -	 VOL -
 MENU	 HOME MENU
 Up	 Up
 TEXT / MIX / TV	 GOTO TEXT
 TV	 PROGRAM TV / RADIO
 Left	 Left
 Enter	 OK
 Right	 Right
 Audio	 LANG I/II AUDIO
 Down	 Down
 Exit	 CLEAR EXIT CANCEL
 Freeze / Hold	 HOLD
 Freeze / Hold	 STEP - FREEZE
 Quick View / Sub Page	 MEDIA DISPLAY
 F / T / B	 LIST SMART



