























 













 

 







Original	Sustituto
	 Mute / Dimmer
	 Power
	 Back / Return
	 Audio / Lang I/II
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Guide / EPG / -/--
	 Fav / Marker / PC
	 Menu / Home

Original	Sustituto
	 Info / Angle
	 Left
	 Up
	 CH+ / Page+
	 Right
	 Down
	 CH- / Page-
	 Vol-
	 Vol+
	 Red / Netflix / Search
	 Sound / Title
	 Green / APP / Repeat
	 Picture / Format
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 TV/Radio /
	 AV / Input / RDS





Original	Sustituto
	Text / Goto
	+  Shift + Text /
	Sleep / Timer
	Stop / Hold
	Setup / OPT /
	Zoom / Size
	Smart / List
	Display / Media

Original	Sustituto

