

 
 






 


 

 


 
 











 






Original	Sustituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TTX	 Text
 SUB	 Subt
 Menu	 Menu
 Exit	 Exit
 Up	 Up

Original	Sustituto
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 PG-	 Ch -
 PG+	 Ch +
 TV/R	 TV/R
 LAST	 Back
 Info	 Info
 Mode	 Smart
 Audio	 Dual
 EPG	 Guide
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 White	 Pre Ch

