



Original	Sustituto
	Power
	+ Shift + Menu
	AV
	Dual
	Subt
	Info
	D. Menu
	TV/R
	Eject
	+ Shift + AV
	Back
	Options
	Guide
	Up
	Down
	Right
	Left

Original	Sustituto
	Red
	+ Shift + Format
	Green
	+ Shift + Dual
	Yellow
	Menu
	Blue
	Ok
	+ Shift + Subt
	Text
	Ch -
	Ch +
	Vol -
	Vol +
	1
	2
	3






 

 





 

 

 



 

 

 

 

 


 
 


	Original	Sustituto	Original	Sustituto
	4			
	5			
	6			
	7			
	8			
	9			
	0			
	Mute			
	P < P			
	Format			
	Freeze			
	Smart Controls Picture			
	Smart Controls Audio			





Original	Sustituto
	
Power	Power
	
Time	TV/R
	
Zoom	3D
	
Mix	Text
	
[?]	Shift + Info
	
[i+]	Info
	
Freeze/Rec	Pause
	
Format/Stop	Format
	
Source	AV
	
I-II	Dual
	
Up	Up
	
Down	Down
	
Right	Right
	
Left	Left
	
Rec	Rec
	
<<	<<
	
>>	>>

Original	Sustituto
	
Stop	Stop
	
Play	Play
	
Timer	Shift + AV
	
P-	Ch -
	
P+	Ch +
	
1	1
	
2	2
	
3	3
	
4	4
	
5	5
	
6	6
	
7	7
	
8	8
	
9	9
	
0	0
	
-/-	Guide

