
















 

 

 








 
 



 





 





















Original	Sustituto	Original	Sustituto
	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Vol+		Vol+
	Vol-		Vol-
	Left		Left
	Right		Right
	I<<		I<< / Preset-
	>>I		>>I / Preset+

Original	Sustituto	Original	Sustituto
	Stop		Stop / Hold
	Play/Pause		Play / Slow
	Play/Pause		Pause / Step / Freeze
	I>/Resume		Shift + Play /
	Surround		Eject / Surround
	Sound		Sound / Title
	Night		Shift + Sleep / Timer
	Mute		Mute / Dimmer
	Repeat		Green / APP / Repeat
	Repeat A-B		Yellow / YouTube / Repeat
	Sleep		Sleep / Timer
	DIM		Shift + Mute / Dimmer
	Subw +		Up
	Rear +		Shift + CH+ /
	Center +		CH+ / Page+
	Tv Vol+		Shift + Vol+
	Subw -		Down











Original	Sustituto	Original	Sustituto
REAR	Rear -  +  Shift + CH- /		
CENTER	 CH- / Page-		
TV VOL	 +  Shift + Vol-		









 













 

 







 
 


Original		Sustituto	
	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Disc (DVD)		D.Menu / Top
	0		0
	Vol+		Vol+
	System (DVD)		Menu / Home
	Vol-		Vol-
	I<<		I<< / Preset-
	>>I		>>I / Preset+

Original		Sustituto	
	Stop		Stop / Hold
	Play/Pause		Play / Slow
	I>/Resume		Shift + Play /





Original		Sustituto		Original		Sustituto	
	Standby		Power				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Up		Up				
	Left		Left				
	OK		OK				
	Right		Right				
	Down		Down				





Original	Sustituto
Standby	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0

Original	Sustituto

