



| Original | Sustituto |
|----------|-------------------|
| | Vol+ |
| | CH+ / Page+ |
| | Vol- |
| | Power |
| | CH- / Page- |
| | Mute / Dimmer |
| | 1 |
| | 2 |
| | 3 |
| | 4 |
| | 5 |
| | 6 |
| | 7 |
| | 8 |
| | 9 |
| | Back / Return |
| | Fav / Marker / PC |

| Original | Sustituto |
|----------|-------------------|
| | 0 |
| | Display / Media |
| | Text / Goto |
| | Stop / Hold |
| | Smart / List |
| | Zoom / Size |
| | I<< / Preset- |
| | Left |
| | Menu / Home |
| | OK |
| | >>I / Preset+ |
| | Right |
| | Audio / Lang I/II |
| | Setup / OPT / |

