


 

 

 
 
 


 




 



 

 

 


 
 








Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Last View	 Pre Ch
 Radio/Tv	 TV/R
 Internet	 Smart
 CH/Page+	 Ch +
 Skype	 List
 CH/Page-	 Ch -

Original	Sustituto
 Guide	 Guide
 Exit	 Exit
 Return	 Back
 Option	 Options
 i/Status	 Info
 Pause/Pause Tv	 Pause
 I<<	 I<<
 >>I	 >>I
 <<	 <<
 >>	 >>
 Play/x1.3	 Play
 Stop	 Stop
 Function Menu	 Menu
 Direct Navigator/PopUp	 Shift + Menu
 OK	 Ok
 Up	 Up
 Down	 Down



