



Original	Sustituto
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Cancel	Shift + Exit / Cancel / Clear
Audio	Audio / Lang I/II
Open/Close	Eject / Surround
PIP	Picture / Format
Internet	Smart / List
Audio	Sound / Title

Original	Sustituto
<< Search	<< / Tune-
Play	Play / Slow
Search >>	>> / Tune+
I<< Skip	I<< / Preset-
Pause	Pause / Step / Freeze
Skip >>I	>>I / Preset+
Stop	Stop / Hold
Exit	Exit / Cancel / Clear
Status	Info / Angle
Option	Setup / OPT /
Return	Back / Return
Top Menu	D.Menu / Top
Home	Menu / Home
Pop-Up Menu	Display / Media
Up	Up
Down	Down
Right	Right



Secondary



Original	Sustituto
Left	Left
OK	OK
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Tv Vol+	Vol+
Power TV	Shift + Power
Tv Vol-	Vol-
AV Input TV	AV / Input / RDS

Original	Sustituto

