


 
 

 
 
 



 

 

 
 






 
 
 
 

 

 






 

 
 

 










Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Cancel	 D. Menu
 Audio	 Dual
 Open/Close	 Eject
 Status	 Subt
 Miracast	 TV/R
 Internet	 Shift + Smart

Original	Sustituto
 <<	 <<
 Play	 Play
 >>	 >>
 I<<	 I<<
 Pause	 Pause
 >>I	 >>I
 Stop	 Stop
 Menu/Pop-Up	 Menu
 X/Exit	 Exit
 Option	 Options
 Return	 Back
 Top Menu	 Shift + Menu
 Netflix	 Media
 Home	 Smart
 Up	 Up
 Down	 Down
 Right/I>	 Right





Original	Sustituto
	Left
	Ok
	Red
	Green
	Yellow
	Blue
	Shift + Power
	AV
	Vol +
	Vol -

Original	Sustituto

