



Original	Sustituto	Original	Sustituto
	Power		Power
	SD/HC		Display / Media
	Input TV		Shift + 1
	Input TV		TV/Radio /
	Input AV		AV / Input / RDS
	[+] / Aspect		Picture / Format
	Menu		Menu / Home
	N		Audio / Lang I / II
	Direct Tv Rec		Shift + Rec / Rec Mode
	i		Info / Angle
	Exit		Exit / Cancel / Clear
	Viera Tools		D.Menu / Top
	Viera Link		Smart / List
	Up		Up
	Guide		Guide / EPG / -/-
	Left		Left
	OK		OK

Original	Sustituto	Original	Sustituto
	Right		Right
	Option		Setup / OPT /
	Down		Down
	Back/Return		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Text		Text / Goto
	STTL		Subtitle / EQ
	Index		Zoom / Size
	Hold		Shift + Stop /
	1		1
	2		2
	3		3
	4		4
	5		5





Original		Sustituto		Original		Sustituto	
	6		6		Play		Play / Slow
	7		7		>>		>> / Tune+
	8		8		>>		>> / Preset+
	9		9		Stop		Stop / Hold
	Mute		Mute / Dimmer		Pause/Step		Pause / Step / Freeze
	0		0				
	(<>)		Sound / Title				
	Vol+		Vol+				
	CH+		CH+ / Page+				
	Vol-		Vol-				
	CH-		CH- / Page-				
	Power Down		Shift + Power				
	Rec		Rec / Rec Mode				
	Programme		Shift + CH- /				
	Programme Up		Shift + CH+ /				
	<<		<< / Tune-				
	<<		<< / Preset-				





Original	Sustituto
Power Down	Power
Rec	Rec / Rec Mode
Programme	CH- / Page-
Programme Up	CH+ / Page+
<<	<< / Tune-
I<<	I<< / Preset-
Play	Play / Slow
>>	>> / Tune+
>>I	>>I / Preset+
Stop	Stop / Hold
Pause/Step	Pause / Step / Freeze

Original	Sustituto

