





 




 

 

 


 


 

 





 

 

 





 

 











 
 
 

 
 
Original	Sustituto
	 Power
	 +  Shift + Power
	 Vol+
	 +  Shift + CH+ /
	 Smart / List
	 +  Shift + AV / Input / RDS
	 Vol-
	 +  Shift + CH- /
	 1
	 2
	 3
	 CH+ / Page+
	 4
	 5
	 6
	 CH- / Page-
	 7

Original	Sustituto
	 8
	 9
	 +  Shift + Display / Media
	 +  Shift + Exit / Cancel / Clear
	 Fav / Marker / PC
	 0
	 AV / Input / RDS
	 TV/Radio /
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-
	 >> / Tune+
	 Stop / Hold
	 Pause / Step / Freeze
	 Play / Slow
	 Info / Angle
	 Guide / EPG / -/-





Original	Sustituto
	Exit / Cancel / Clear
	Shift + Smart / List
	D.Menu / Top
	Left
	OK
	Up
	Right
	Menu / Home
	Setup / OPT /
	Down
	Back / Return
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Rec / Rec Mode
	Shift + Rec / Rec Mode

Original	Sustituto
	Eject / Surround
	Picture / Format
	Text / Goto
	Subtitle / EQ
	Audio / Lang I/II
	Display / Media

