



Original	Sustituto		
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall/Last View		Pre Ch
	Radio/Tv		TV/R
	CH/Page+		Ch +
	CH/Page-		Ch -
	Internet		Smart
	Skype		Media

Original	Sustituto		
	I<< Skip		I<<
	Skip >>I		>>I
	<< Slow/Search		<<
	Slow/Search >>		>>
	Stop		Stop
	Pause		Pause
	Play		Play
	i/Status		Info
	X/Exit		Exit
	Option		Options
	Return		Back
	Direct Navigator		List
	Guide		Guide
	Function Menu		Menu
	Up		Up
	Down		Down
	Right		Right





Original	Sustituto
Left	Left
OK	Ok
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
Rec	Rec
	+
Rec Mode	Shift + Rec
Text	Text
STTL	Subt
Prog/Check	Sleep
Chapter	AV
Time Slip	Eject
Audio	Dual
Drive Select	D. Menu
	+
Del	Shift + Exit
Manual Skip -10s	Format

Original	Sustituto
Manual Skip +60s	3D
	+
Power Tv	Shift + Power
	+
Av Input Tv	Shift + AV
Vol+ Tv	Vol +
Vol- Tv	Vol -
	+
CH+ Tv	Shift + Ch +
	+
CH- Tv	Shift + Ch -

