


 

 





 

 

 

 





 




 
 

 


 









Original	Sustituto
 Power	 Power
 Sleep / Auto Off	 Sleep
 Clock/Timer	 AV
 Timer Play/Timer Rec	 Format
 1 / Disc 1	 1
 2 / Disc 2	 2
 3 / Disc 3	 3
 4 / Disc 4	 4
 5 / Disc 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ≥10	 Guide
 Disc	 Pre Ch
 Display	 Info

Original	Sustituto
 Dimmer	 Back
 Play Mode	 Shift + Play
 Program	 Shift + Sleep
 AUX	 Red
 Tuner	 Green
 Tape Play	 Yellow
 Tape Play	 Right
 Play CD	 Play
 Pause CD	 Pause
 Play/Pause CD	 Blue
 Down	 Down
 I<<	 I<<
 REW	 REW
 Up	 Up
 >>I	 >>I
 FF	 FF
 Stop	 Stop





Original	Sustituto	Original	Sustituto
 S.Sound EQ	 Smart		
 Preset EQ	 Media		
 Muting	 Mute		
 Volume-	 Vol -		
 Volume+	 Vol +		

Original	Sustituto

