




 

 




 
 






















 




 

 


 


 








Original	Sustituto	Original	Sustituto
 Power	 Power	 Play	 Play
 Sleep	 Sleep	 Pause	 Pause
 AUX	 AV	 Stop / CD	 Stop
 Tuner/Band	 TV/R	 Tape	 Media
 Preset Down	 Ch -	 V.Bass	 Dual
 Preset Up	 Ch +	 EQ On/Flat	 Subt
 Program	 Shift + Sleep	 EQ Mode	 Format
 Cancel	 Exit	 Volume+	 Vol +
 Repeat	 Text	 Volume-	 Vol -
 Disc	 Guide	 Muting	 Mute
 Disc 1	 1		
 Disc 2	 2		
 Disc 3	 3		
 Disc 4	 4		
 Disc 5	 5		
 I<<	 I<<		
 >>I	 >>I		

