



Original	Sustituto
Power	Power
Power Tv	Shift + Power
Vol+ Tv	Vol+
CH+ TV	Shift + CH+ /
AV Input Tv	AV / Input / RDS
Vol- Tv	Vol-
CH- Tv	Shift + CH- /
1	1
2	2
3	3
Rec	Rec / Rec Mode
4	4
5	5
6	6
CH+	CH+ / Page+
7	7
8	8

Original	Sustituto
9	9
CH-	CH- / Page-
Last View	Shift + Back / Return
0	0
Drive Select	Display / Media
Prog/Check	Menu / Home
-10s	Fav / Marker / PC
+60s	Shift + Guide / EPG / -/-
Internet	Smart / List
Netflix	Shift + Red / Netflix /
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
I<<	I<< / Preset-
Pause	Pause / Step / Freeze
>>I	>>I / Preset+
Stop	Stop / Hold





Original		Sustituto	
	i/Status		Info / Angle
	Guide		Guide / EPG / -/--
	Exit		Exit / Cancel / Clear
	Video Menu		Shift + 4
	Up		Up
	Function Menu		D.Menu / Top
	Left		Left
	OK		OK
	Right		Right
	Option		Setup / OPT /
	Down		Down
	Return		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Audio		Audio / Lang I/II

Original		Sustituto	
	Delete		Shift + Exit / Cancel / Clear
	Text		Text / Goto
	STTL		Subtitle / EQ

