



| Original | Sustituto |
|-------------|-------------------------------|
| Power | Power |
| Power Tv | Shift + Power |
| AV Input Tv | AV / Input / RDS |
| Vol+ Tv | Vol+ |
| Vol- Tv | Vol- |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| Cancel | Shift + Exit / Cancel / Clear |
| Audio | Audio / Lang I/II |

| Original | Sustituto |
|-------------|--------------------------------|
| Open/Close | Eject / Surround |
| Status | TV/Radio / |
| PIP | Zoom / Size |
| Internet | Smart / List |
| << Search | << / Tune- |
| Play | Play / Slow |
| Search >> | >> / Tune+ |
| I<< Skip | I<< / Preset- |
| Pause | Pause / Step / Freeze |
| Skip >>I | >>I / Preset+ |
| Stop | Stop / Hold |
| Pop Up Menu | Menu / Home |
| EXit | Exit / Cancel / Clear |
| Option | Setup / OPT / |
| Return | Back / Return |
| Top Menu | D.Menu / Top |
| Netflix | Shift + Red / Netflix / Search |



