

 













 






















Original	Sustituto
	 Power
	 Shift + Power
	 Smart / List
	 Display / Media
	 Info / Angle
	 Up
	 Down
	 Left
	 Right
	 OK
	 Shift + Zoom /
	 Picture / Format
	 Sound / Title
	 Setup / OPT /
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat

Original	Sustituto
	 Fav / Marker / PC
	 AV / Input / RDS
	 Mute / Dimmer
	 CH+ / Page+
	 CH- / Page-
	 Vol+
	 Vol-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0











 



















Original	Sustituto
 C / ID Set	 Shift + Setup / OPT / Tools
 -/-- / ID All	 Guide / EPG / -/--
 [+] / Aspect	 Shift + Picture / Format
 Surround	 Eject / Surround
 Off Timer	 Exit / Cancel / Clear
 Multi PIP	 D.Menu / Top
 Swap	 Back / Return
 Select	 Shift + OK
 Zoom / Movie	 Zoom / Size

Original	Sustituto





Original	Sustituto
On	 Power
N	 Smart / List
R	 Display / Media
[+]	 Info / Angle
Off	 Shift + Power
■	 OK
Up	 Up
Down	 Down
Right	 Right
Left	 Left
Input 1	 Red / Netflix / Search
Input 2	 Green / APP / Repeat
Input 3	 Yellow / YouTube / Repeat
PC	 Fav / Marker / PC
Input	 AV / Input / RDS
Mute	 Mute / Dimmer
CH+	 CH+ / Page+

Original	Sustituto
CH-	 CH- / Page-
Vol+	 Vol+
Vol-	 Vol-
1	 1
2	 2
3	 3
4	 4
5	 5
6	 6
7	 7
8	 8
9	 9
0	 0
[]/Picture	 Picture / Format
J/Sound	 Sound / Title
Set Up	 Setup / OPT /
Pos Size	 Text / Goto





Original	Sustituto	Original	Sustituto
[+]/Aspect	 Shift + Picture / Format		
Surround	 Eject / Surround		
Off Timer	 Exit / Cancel / Clear		
Multi PIP	 Zoom / Size		
Swap	 Back / Return		
Zoom/Movie	 TV/Radio /		

