





 








Original	Sustituto
	 Power
	 Picture / Format
	 Audio / Lang I/II
	 TV/Radio /
	 Menu / Home
	 Text / Goto
	 Subtitle / EQ
	 AV / Input / RDS
	 Info / Angle
	 Exit / Cancel / Clear
	 Shift + Home / Menu /
	 Shift + Red / Netflix /
	 Left
	 Up
	 Right
	 Guide / EPG / -/-
	 OK

Original	Sustituto
	 Setup / OPT /
	 Down
	 Back / Return
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Vol+
	 Mute / Dimmer
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5





Original		Sustituto	
	6		6
	7		7
	8		8
	9		9
	?/eHelp		Shift + Info / Angle
	0		0
	Last View		Fav / Marker / PC
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	l<<		l<< / Preset-
	Pause		Pause / Step / Freeze
	>>l		>>l / Preset+
	My App		Zoom / Size
	Stop		Stop / Hold
	REC		Rec / Rec Mode

Original		Sustituto	

