




 
 






 


Original	Sustituto
 Power	 Power
 Info	 Info / Angle
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Source	 AV / Input / RDS
 0	 0
 O)/I-II/Audio	 Audio / Lang I/II
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear

Original	Sustituto
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 CH+	 CH+ / Page+
 Index	 Display / Media
 Vol+	 Vol+
 CH-	 CH- / Page-
 List	 Smart / List
 Vol-	 Vol-
 ♥	 Fav / Marker / PC
 Sleep	 Sleep / Timer
 EPG	 Guide / EPG / -/-
 Recall	 Back / Return
 Red	 Red / Netflix / Search
 <<	 << / Tune-










 
 
















Original		Sustituto		Original	Sustituto
	Green		Green / APP / Repeat		
	>>		>> / Tune+		
	Yellow		Yellow / YouTube / Repeat		
	I<<		I<< / Preset-		
	Blue		Blue / Prime Video / Random		
	>>		>> / Preset+		
	[≡]		Text / Goto		
	Play		Play / Slow		
	Pause		Pause / Step / Freeze		
	[≡+]		Zoom / Size		
	Stop/Still		Stop / Hold		
	Radio		TV/Radio /		
	[≡♦]/[++]		Setup / OPT /		
	[≡x]		Picture / Format		
	[≡o]/Subtitle		Subtitle / EQ		
	DMP		D.Menu / Top		
	Rec		Rec / Rec Mode		





Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 Text / Play/Pause	 Play / Slow
 Text / Play/Pause	 Pause / Step / Freeze
 Stop / Still	 Stop / Hold
 Rec	 Rec / Rec Mode
 Audio I/II	 Audio / Lang I/II
 Subtitle / [≡o]	 Subtitle / EQ
 [≡x]	 Picture / Format
 Size / Aspect	 Zoom / Size
 Sleep	 Sleep / Timer
 Radio	 TV/Radio /
 DMP	 D.Menu / Top
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Info	 Info / Angle

Original	Sustituto
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Recall	 Back / Return
 Vol +	 Vol+
 List	 Smart / List
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Index	 Display / Media
 CH -	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Original	Sustituto
6	TUNER 6
7	AUX - HDD 7
8	USB 8
9	BLUETOOTH 9
EPG	GUIDE EPG Guide / EPG / -/--
0	HDMI - BAT 0
Fav	PC FAV MARKER Fav / Marker / PC
Red / <<	NETFLIX SEARCH Red / Netflix / Search
Green / >>	APP REPEAT Green / APP / Repeat
Yellow / <<	YouTube REPEAT A-B Yellow / YouTube / Repeat
Blue / >>	Prime Video RANDOM Blue / Prime Video / Random
Text / Play/Pause	SHIFT + SLOW Play /
Red / <<	SHIFT + NETFLIX SEARCH Shift + Red / Netflix /
Green / >>	SHIFT + APP REPEAT Shift + Green / APP /
Yellow / <<	SHIFT + YouTube REPEAT A-B Shift + Yellow / YouTube /
Blue / >>	SHIFT + Prime Video RANDOM Shift + Blue / Prime

Original	Sustituto

