












Original	Sustituto
	 Shift + 1
	 TV/Radio /
	 Power
	 Smart / List
	 D.Menu / Top
	 Menu / Home
	 Guide / EPG / -/--
	 Audio / Lang I/II
	 Display / Media
	 Up
	 Shift + 3
	 AV / Input / RDS
	 Vol+
	 Left
	 OK
	 Right
	 CH+ / Page+

Original	Sustituto
	 Vol-
	 Down
	 CH- / Page-
	 Info / Angle
	 Picture / Format
	 Back / Return
	 Exit / Cancel / Clear
	 << / Tune-
	 Pause / Step / Freeze
	 Play / Slow
	 >> / Tune+
	 Stop / Hold
	 Rec / Rec Mode
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random





	Original	Sustituto		Sustituto
	White/E/TXT		Text / Goto	
	1		1	
	2		2	
	3		3	
	4		4	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	Mute		Mute / Dimmer	
	0		0	
	Prefe		Fav / Marker / PC	

	Original	Sustituto

