









 

 



 

 

 





 











Original	Sustituto
 Source	 AV / Input / RDS
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 EPG	 Guide / EPG / -/--
 0	 0
 Pre PR	 Back / Return
 HDMI	 Shift + 0
 YPbPr	 D.Menu / Top
 Video	 Shift + 4

Original	Sustituto
 PC	 Fav / Marker / PC
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+
 Vol-	 Vol-
 [<>]	 Picture / Format
 PR-	 CH- / Page-
 Dual	 Audio / Lang I/II
 Adj Audio	 Sound / Title
 Adj Video	 Shift + Picture / Format
 Sleep	 Sleep / Timer
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Menu/Exit	 Menu / Home
 Down	 Down





Original	Sustituto
[i+]	Info / Angle
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Teletext	Text / Goto
Mix	Shift + Text /
Size	Zoom / Size
Subpage	Eject / Surround
Index	TV/Radio /
Subtitle	Subtitle / EQ
Hold	Stop / Hold
Reveal	Display / Media
Eco	Setup / OPT /
PR List	Smart / List
Freeze	Pause / Step / Freeze
Nothing	Exit / Cancel / Clear

Original	Sustituto

