







 

 











 

 

 



 



 







 

 





















 





| Original  | Sustituto | Original  | Sustituto                      |
|---|-----------|---|--------------------------------|
|      | Power     |      | Power                          |
|      | Stop      |      | Stop / Hold                    |
|      | Pause     |      | Pause / Step / Freeze          |
|      | Rec       |      | Rec / Rec Mode                 |
|      | <<        |      | << / Tune-                     |
|      | Play      |      | Play / Slow                    |
|      | >>        |      | >> / Tune+                     |
|      | Red       |      | Red / Netflix / Search         |
|      | Green     |      | Green / APP / Repeat           |
|      | Yellow    |      | Yellow / YouTube / Repeat      |
|     | Blue      |     | Blue / Prime Video / Random    |
|    | Find      |    | Shift + Red / Netflix / Search |
|    | Home      |    | Menu / Home                    |
|    | Adjust    |    | Smart / List                   |
|    | Up        |    | Up                             |
|    | CH-/I<    |    | CH- / Page-                    |
|    | Left      |    | Left                           |
|    | OK        |    | OK                             |
|    | Right     |    | Right                          |
|    | CH+ />I   |    | CH+ / Page+                    |
|    | Down      |    | Down                           |
|    | Source    |    | AV / Input / RDS               |
|    | Back      |    | Back / Return                  |
|    | Options   |    | Setup / OPT /                  |
|    | Vol-      |    | Vol-                           |
|    | Mute      |    | Mute / Dimmer                  |
|    | Vol+      |    | Vol+                           |
|   | 1         |   | 1                              |
|  | 2         |  | 2                              |
|  | 3         |  | 3                              |
|  | 4         |  | 4                              |
|  | 5         |  | 5                              |
|  | 6         |  | 6                              |
|  | 7         |  | 7                              |



