



Original	Sustituto
	 Power
	 TV/R
	 Subt
	 Format
	 Guide
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Pre Ch
	 Back

Original	Sustituto
	 D. Menu
	 Media
	 Stop
	 Pause
	 Play
	 I<<
	 >>I
	 Rec
	 <<
	 >>
	 Ch +
	 Ch -
	 Up
	 Down
	 Right
	 Left
	 Ok





Original	Sustituto
TIMER 	TIMER AV AV
EDIT 	REPEAT TEXT Text
Tv Vol+ 	+ VOL Vol +
Tv Vol- 	VOL - Vol -
MUTE 	MUTE Mute
INFO 	DISPLAY INFO Info
SYSTEM 	HOME SMART Smart
	A Red Red
	B Green Green
	C Yellow Yellow
	D Blue Blue

Original	Sustituto

