

 





 

 







 

 

 

 











 







 






















Original	Sustituto
	 Power
	 D.Menu / Top
	 AV / Input / RDS
	 Setup / OPT /
	 Picture / Format
	 TV/Radio /
	 Exit / Cancel / Clear
	 Guide / EPG / -/-
	 Display / Media
	 Smart / List
	 Up
	 Left
	 OK
	 Right
	 Down
	 Back / Return
	 Info / Angle

Original	Sustituto
	 Menu / Home
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Vol+
	 Shift + Red / Netflix /
	 CH+ / Page+
	 Vol-
	 Mute / Dimmer
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6





Original		Sustituto		Original		Sustituto	
	7		7				
	8		8				
	9		9				
	Subtitle		Subtitle / EQ				
	0		0				
	Text		Text / Goto				
	Stop		Stop / Hold				
	Pause		Pause / Step / Freeze				
	Rec		Rec / Rec Mode				
	<<		<< / Tune-				
	Play		Play / Slow				
	>>		>> / Tune+				

