




Original	Sustituto
	Power
	+ Shift + Menu
	AV AV
	DUAL Dual
	SUBT Subt
	INFO Info
	D.MENU D. Menu
	TV/R TV/R
	Eject
	+ AV Shift + AV
	BACK Back
	OPT Options
	GUIDE Guide
	Up
	Down
	Right
	Left

Original	Sustituto
	Red
	+ FORMAT Shift + Format
	Green
	+ DUAL Shift + Dual
	Yellow
	MENU Menu
	Blue
	Ok
	+ SUBT Shift + Subt
	TEXT Text
	Ch -
	Ch +
	Vol -
	Vol +
	1
	2
	3





	Original	Sustituto	Original	Sustituto
	4			
	5			
	6			
	7			
	8			
	9			
	0			
	Mute			
	P < P			
	Format			
	Freeze			
	Smart Controls Picture			
	Smart Controls Audio			





Original	Sustituto	Original	Sustituto
	Power		Power
	Time		TV/R
	Zoom		3D
	Mix		Text
	[?]		Shift + Info
	[i+]		Info
	Freeze/Rec		Pause
	Format/Stop		Format
	Source		AV
	I-II		Dual
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Rec		Rec
	<<		<<
	>>		>>

Original	Sustituto	Original	Sustituto
	Stop		Stop
	Play		Play
	Timer		Shift + AV
	P-		Ch -
	P+		Ch +
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-		Guide

