














 




 












 






Original	Sustituto
	 Power
	 TV/Radio /
	 Shift + 1
	 Subtitle / EQ
	 Text / Goto
	 AV / Input / RDS
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Audio / Lang I/II
	 Menu / Home
	 Guide / EPG / -/--
	 Setup / OPT /
	 Up
	 Left
	 OK

Original	Sustituto
	 Right
	 Back / Return
	 Down
	 Info / Angle
	 << / Tune-
	 Play / Slow
	 Pause / Step / Freeze
	 >> / Tune+
	 Stop / Hold
	 Rec / Rec Mode
	 Vol+
	 Mute / Dimmer
	 CH+ / Page+
	 Vol-
	 Shift + Format / Picture / Format
	 CH- / Page-
	 1





Original		Sustituto	
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	J/Sound		Sound / Title
	0		0
	[]/Picture		Picture / Format

Original		Sustituto	

