





Original	Sustituto
 Timer Set	 Sleep / Timer
 Standby - On	 Power
 Prog / System	 Menu / Home
 Prog / System	 TV/Radio /
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Rec	 Rec / Rec Mode
 Display	 Display / Media
 Zoom	 Zoom / Size
 P -	 CH- / Page-
 Clear	 Shift + Exit / Cancel / Clear
 Exit / Status	 Exit / Cancel / Clear
 P +	 CH+ / Page+
 Title	 Sound / Title
 System	 Smart / List
 Return	 Back / Return

Original	Sustituto
 DVD	 Shift + 2
 TUNER	 Shift + 6
 VCR	 Shift + 4
 VCR Menu	 D.Menu / Top
 Up	 Up
 OK	 OK
 Left	 Left
 Right	 Right
 Stop	 Stop / Hold
 Down	 Down
 Play	 Play / Slow
 << REW	 << / Tune-
 Pause	 Pause / Step / Freeze
 >> FF	 >> / Tune+
 1	 1
 2	 2
 3	 3





Original	Sustituto
[SLOW]	[SHIFT] + [SLOW] → Shift + Play /
[4]	[4]
[5]	[5]
[6]	[6]
[SV/V+]	[RDS AV INPUT] → AV / Input / RDS
[7]	[7]
[8]	[8]
[9]	[9]
[SEARCH/INDEX]	[SHIFT] + [INFO] → Shift + Info / Angle
[0]	[0]
[REPEAT]	[APP REPEAT] → Green / APP / Repeat
[REPEAT A-B]	[YouTube REPEAT A-B] → Yellow / YouTube / Repeat
[SURROUND]	[SURROUND] → Eject / Surround
[SOUND]	[SHIFT] + [TITLE SOUND] → Shift + Sound / Title
[VOL-]	[VOL-] → Vol-
[VOL+]	[VOL+] → Vol+

Original	Sustituto





Original	Sustituto
Timer Set	Sleep / Timer
Standby - On	Power
Prog / System	Menu / Home
Prog / System	TV/Radio /
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Angle	Info / Angle
Display	Display / Media
Zoom	Zoom / Size
I<<	I<< / Preset-
Clear	Exit / Cancel / Clear
>>I	>>I / Preset+
Title	Shift + Sound / Title
Mode	Text / Goto
Return	Back / Return
DVD	Shift + 2
TUNER	Shift + 6

Original	Sustituto
VCR	Shift + 4
Disc Menu	D.Menu / Top
Up	Up
OK	OK
Left	Left
Right	Right
Stop	Stop / Hold
Down	Down
Play	Play / Slow
<< REW	<< / Tune-
Pause	Pause / Step / Freeze
>> FF	>> / Tune+
1	1
2	2
3	3
Slow	Shift + Play /
4	4






























Original	Sustituto	Original	Sustituto
	5		5
	6		6
	SV / V+		AV / Input / RDS
	7		7
	8		8
	9		9
	Search		Red / Netflix / Search
	+10		Guide / EPG / -/-
	0		0
	Repeat		Green / APP / Repeat
	Repeat A-B		Yellow / YouTube / Repeat
	Surround		Eject / Surround
	Sound		Sound / Title
	Vol -		Vol-
	Vol +		Vol+

Original	Sustituto	Original	Sustituto





Original	Sustituto
 Standby - On	 Power
 Prog / System	 TV/Radio /
 Prog / System	 Menu / Home
 Band	 Smart / List
 I<<	 CH- / Page-
 I<<	 I<< / Preset-
 >>I	 CH+ / Page+
 >>I	 >>I / Preset+
 DVD	 Shift + 2
 TUNER	 Shift + 6
 VCR	 Shift + 4
 Up	 Up
 OK	 OK
 Left	 Left
 Right	 Right
 Stop	 Stop / Hold
 Down	 Down

Original	Sustituto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Surround	 Eject / Surround
 Sound	 Sound / Title
 Vol -	 Vol-
 Vol +	 Vol+

