




 






 
 







Original	Sustituto
 Power	 Power
 Home	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Subtitle	 Subt
 Audio	 Dual
 Pop-Up Menu/Disc Menu	 D. Menu
 Top Menu	 Menu
 Back	 Back

Original	Sustituto
 :≡	 Options
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 Eject	 Eject
 I<	 I<<
 <<	 <<
 >>	 >>
 >I	 >>I
 Red	 Red
 Green	 Green
 Yellow	 Yellow



