


 

 










 

 

 


 


 





 




 

 
 





Original	Sustituto
 Power	 Power
 Source	 AV
 Exit	 Exit
 >>	 >>
 Red	 Red
 Rec	 Rec
 Green	 Green
 <<	 <<
 Yellow	 Yellow
 Stop	 Stop
 Blue	 Blue
 Play	 Play
 [=]/Timer	 Text
	 Shift + Text
 [=I=]/[.≡]	 TV/R
 I-II/[♦]	 Dual
 []/[+]	 Guide

Original	Sustituto
 Menu Tv	 Menu
 Menu Digital	 D. Menu
 [i+]	 Info
 OK/Select	 Ok
 Menu DVD	 Shift + Menu
 D.Menu DVD	 Shift + Smart
 OK DVD	 Shift + Ok
 A/D	 Smart
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Up DVD	 Shift + Up
 Down DVD	 Shift + Down
 Right DVD	 Shift + Right
 Left DVD	 Shift + Left
 P+ DVD	 Shift + Ch +





Original	Sustituto	Original	Sustituto
 P- DVD	 Shift + Ch -	 8	 8
 P+	 Ch +	 9	 9
 P-	 Ch -	 0	 0
 Vol+	 Vol +	 Mute	 Mute
 Vol-	 Vol -	 J/Smart Sound	 Shift + Dual
 [♦]/[?]	 Eject	 []/Smart Picture	 3D
 [<>]	 Format	 1 DVD	 Shift + 1
 Timer	 Shift + AV	 2 DVD	 Shift + 2
	 Media	 3 DVD	 Shift + 3
 P<P	 Pre Ch	 4 DVD	 Shift + 4
 1	 1	 5 DVD	 Shift + 5
 2	 2	 6 DVD	 Shift + 6
 3	 3	 7 DVD	 Shift + 7
 4	 4	 8 DVD	 Shift + 8
 5	 5	 9 DVD	 Shift + 9
 6	 6	 0 DVD	 Shift + 0
 7	 7		

