




 


 


 









 


 



 






 









 



 


 
 

 

 














Original	Sustituto	Original	Sustituto
 Power	 Power	 Rec	 Rec
 Info	 Info	 Red	 Red
 Search	 TV/R	 Green	 Green
 Sources	 AV	 Yellow	 Yellow
 Up	 Up	 Blue	 Blue
 Down	 Down	 Vol+	 Vol +
 Right	 Right	 Vol-	 Vol -
 Left	 Left	 Mute	 Mute
 OK	 Ok	 Netflix	 Shift + Media
 ←	 Pre Ch	 Windows	 Media
 Home	 Smart	 Rakuten Tv	 Shift + Smart
 ≡	 Dual	 CH+	 Ch +
 <<	 <<	 CH-	 Ch -
 Play	 Play	 Exit/Tv	 Exit
 >>	 >>	 1	 1
 Stop	 Stop	 2	 2
 Pause	 Pause	 3	 3





Original	Sustituto	Original	Sustituto
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
TEXT	Text	REPEAT TEXT	Text
LIST TV GUIDE	List/Tv Guide	GUIDE	Guide

