 




 





 
 
 
 

 












 

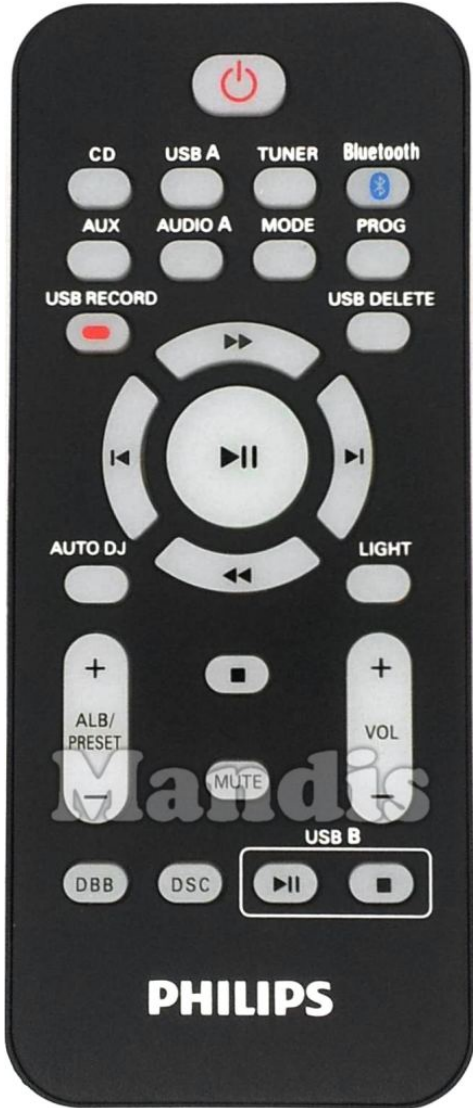 


Original	Sustituto
 Power	 Power
 CD	 1
 USB A	 2
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 DBB	 Format
 DSC	 3D
 Tuner	 3
 Bluetooth	 4
 AUX	 5
 Audio A	 6
 Play/Pause CD / Tuner / Audio A	 Ok
 Stop CD / Tuner / AUX / Audio A	 Stop
 USB Record CD / AUX / Audio A	 Rec
 USB Delete CD / AUX / Audio A	 Exit
 Mode CD / AUX / Audio A	 Menu

Original	Sustituto
 Stop USB B CD / Tuner / AUX /	 Media
 Play/Pause USB B CD / Tuner / AUX /	 Play
 Auto DJ CD / AUX / Audio A	 Back
 Light CD / AUX / Audio A	 Info
 Alb/Presets+ CD / Tuner / AUX /	 Ch +
 Alb/Presets- CD / Tuner / AUX /	 Ch -
 Prog CD / AUX / Audio A	 Options
 Power USB A / Bluetooth	 Shift + Power
 >> CD / AUX / Audio A	 Up
 << CD / AUX / Audio A	 Down
 >  CD / Tuner / AUX / Audio A	 Right
  < CD / Tuner / AUX / Audio A	 Left
 Prog USB A / Bluetooth	 Shift + Options
 Alb/Presets+ USB A / Bluetooth	 Shift + Ch +
 Alb/Presets- USB A / Bluetooth	 Shift + Ch -
 Stop USB A	 Shift + Stop
 Play/Pause USB B USB A / Bluetooth	 Shift + Play





Original	Sustituto
Stop USB B USB A / Bluetooth	+  Shift + Media
Light USB A / Bluetooth	+  Shift + Info
Auto DJ USB A / Bluetooth	+  Shift + Back
Play USB A / Bluetooth	+  Shift + Ok
<< USB A / Bluetooth	+  Shift + Down
>> USB A / Bluetooth	+  Shift + Up
>I USB A / Bluetooth	+  Shift + Right
I< USB A / Bluetooth	+  Shift + Left
Power Tuner	0
>> Tuner	>>
<< Tuner	<<
Light Tuner	TV/R
Mode USB A	+  Shift + Menu
Power AUX /	+  Shift + 0

Original	Sustituto

